INNOKIN®

ZENITH II TANK

Platform series

MTL Ultem drip tip
RDL Teflon drip tip

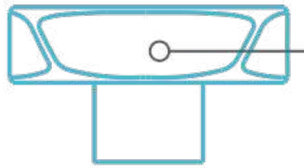

Top cap

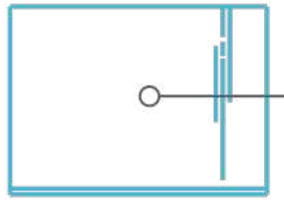

Replaceable glass

Eliquid window view

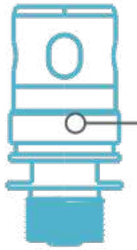

Z-Coil

Adjustable airflow

Coil Information:

MTL Z-Coil Kal 0.8Ω
Warmer vape requiring more wattage. **(15-18W)**

RDL Z-Coil Mesh Kal 0.3Ω
Great restricted direct lung vaping in a compact coil. **(30-40W)**

First Time Use

1 Remove The Pre-Installed Coil

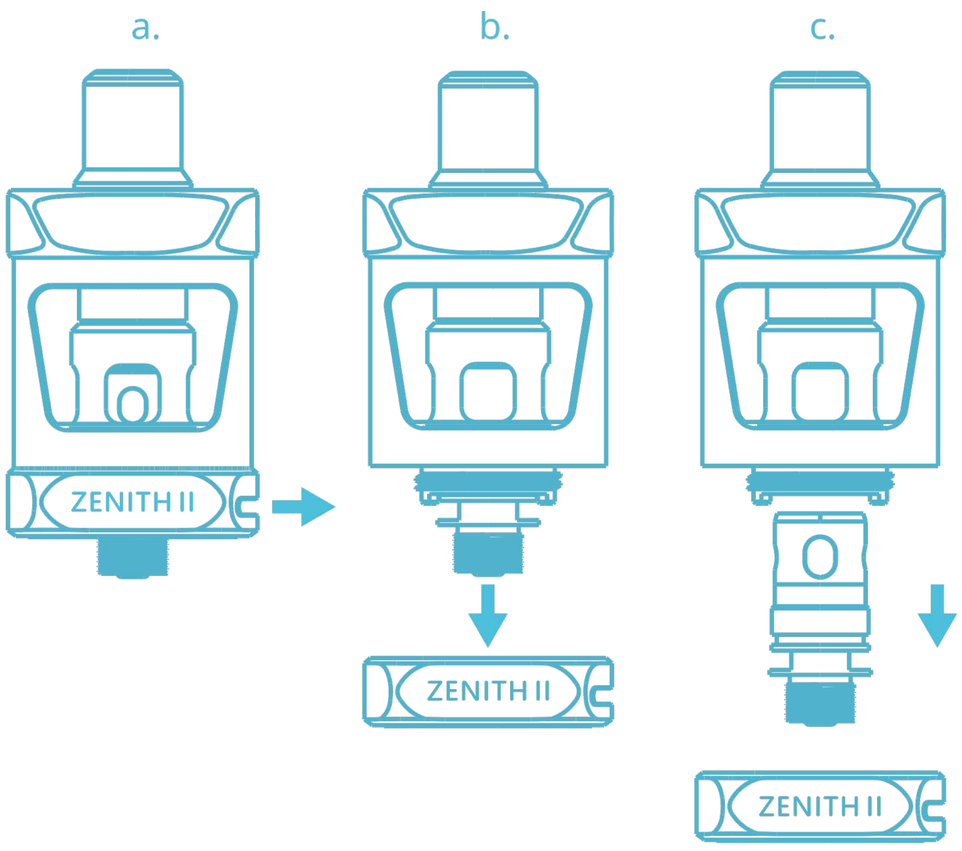

2 Prime The Coil*

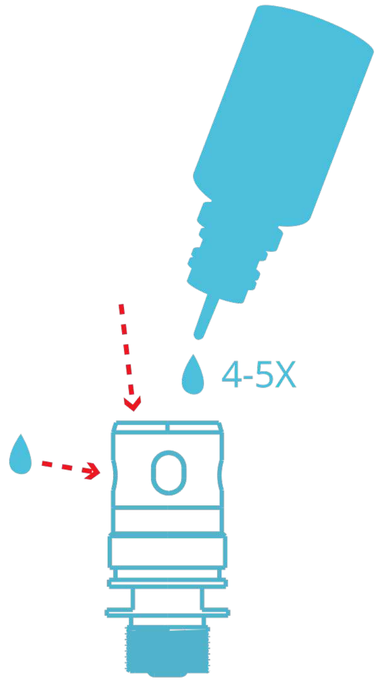

*When using any coil for the first time, drip 4-5 drops of e-liquid into the coil to saturate the cotton within.

3 Install The coil

Reverse direction of step 1.

4 Fill The Tank

Twist the top cap to expose the fill port. Fill with e-liquid. Twist to close. Do not keep the top open any longer than required to fill the tank.

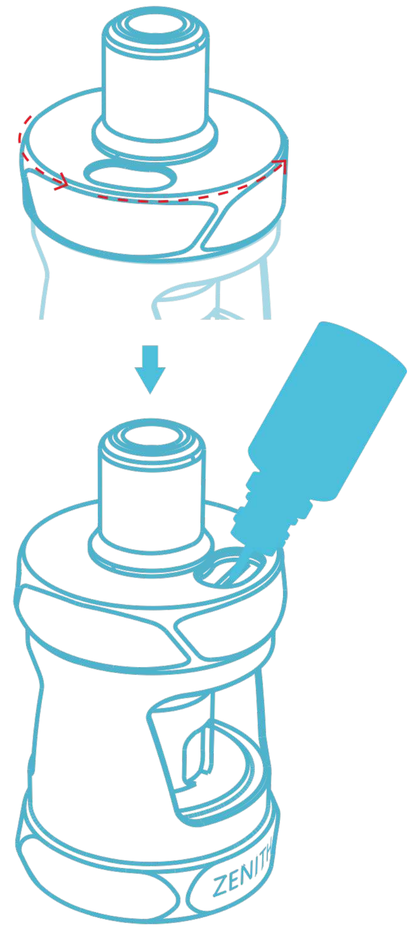

5 Adjust The Airflow

Adjust the airflow to a comfortable draw and ENJOY YOUR VAPE!

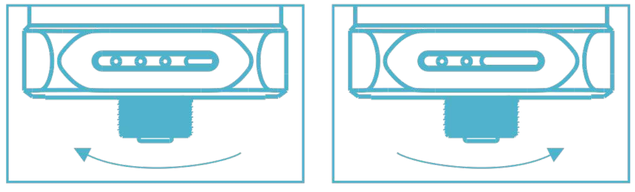

facebook.com/Innokin.Technology

instagram.com/innokintechnology

twitter.com/innokintech

reddit.com/r/innokin

support@innokin.com